


Getac

Using the F110 Handgrip Strap


1. Take the stylus out of the slot on F110.
2. The handgrip strap comes with two brackets. Each bracket has four points (indicated by the circles below) for grasping the buffer frame of F110. Align and engage one of the brackets to the side of F110.

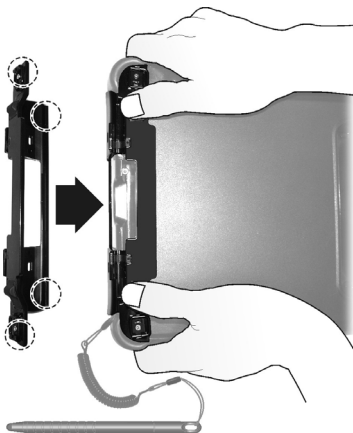

The two brackets are identical though one of them has the strap attached to it. You can engage either bracket to the left or right side of F110.

3. Install the other bracket to the other side of F110 in the same way.

4. Pull the free end of the strap through the opposite bracket and button up.

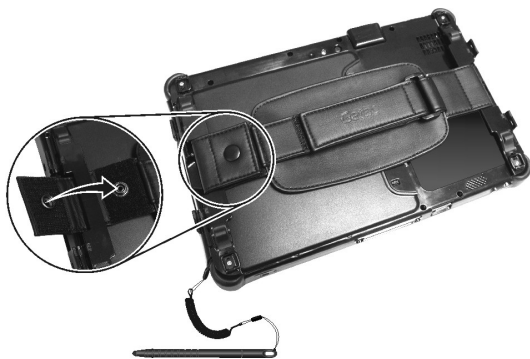

5. Store the stylus in the new location on either of the brackets.



NOTE: The leather part of the handgrip strap is made of PU material. It is normal for such material to undergo hydrolysis after some time of use and therefore peels off. You can replace the handgrip strap when needed.



5 6 1 8 8 5 7 1 0 0 0 1 R 0 0